


ONE CONCEPT

Wäscheschleuder

Spin Dryer

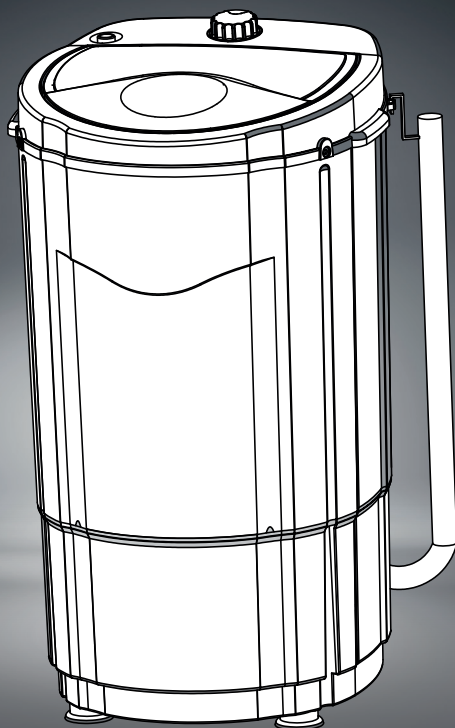

10032558

Sehr geehrter Kunde,

wir gratulieren Ihnen zum Erwerb Ihres Gerätes. Lesen Sie die folgenden Hinweise sorgfältig durch und befolgen Sie diese, um möglichen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Hinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung.

TECHNISCHE DATEN

Artikelnummer	10032558
Stromversorgung	220-240 V ~ 50/60 Hz
Fassungsvermögen	2,5 kg

EIGENSCHAFTEN

- mechanisch fortschrittliche Technik
- hervorragendes Design
- qualitativ hochwertiges, haltbares und rostfreies Kunststoffgehäuse
- große Schleudertrommel
- leicht zu bedienen

KONFORMITÄTSERKLÄRUNG



Hersteller:
Chal-Tec GmbH, Wallstraße 16, 10179 Berlin,
Deutschland.

Dieses Produkt entspricht den folgenden Europäischen
Richtlinien:

2014/30/EU (EMV)
2014/35/EU (LVD)
2011/65/EU (RoHS)


SICHERHEITSHINWEISE

Bei der Verwendung der Wäscheschleuder müssen grundlegende Sicherheitsvorkehrung getroffen werden. Lesen Sie alle Bedienungshinweise, bevor Sie das Gerät verwenden.

- Das Gerät ist nur für den Hausgebrauch bestimmt.
- Gewährleisten Sie, dass der Anschluss geerdet ist.
- Stecken Sie Ihre Hände nicht in die Trommel, wenn sie sich dreht.
- Drehen Sie das Zeitwahlrad im Uhrzeigersinn. Wenn Sie es mit Gewalt entgegen den Uhrzeigersinn drehen, wird das Zeitwahlrad beschädigt.
- Wenn das Gerät ungewöhnliche Geräusche macht und stark vibriert, legen Sie die Kleidung gleichmäßig in die Trommel.

BEDIENUNG

1. Schließen Sie die Wäscheschleuder an die Stromversorgung an.
2. Führen Sie Abflussschlauch nach unten und öffnen Sie den Deckel.

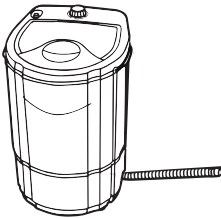

3. Verteilen Sie die Wäsche gleichmäßig in der Trommel. Schließen Sie den Deckel.
4. Stellen Sie das Zeitwahlrad auf die gewünschten Minuten.

Hinweise:

Die Wäschetrommel hält an, wenn der Deckel geöffnet wird.

Wenn Sie mit der Benutzung der Maschine fertig sind, ziehen Sie den Netzstecker.

Halten Sie die Maschine sauber und trocken. Stellen Sie die Maschine in einen gut belüfteten Bereich.

Schleuderzeiten

Material	Zeit
Seide, Wolle, Kunstfasern	1-2 Minuten
Baumwolle, Leinen	2-4 Minuten

FEHLERBEHEBUNG

Problem	Grund	Lösung
Die Trommel dreht sich nicht.	Das Zeitwahrld ist lose.	Überprüfen Sie das Zeitwahrld.
	Die Schrauben des Motors und der Trommel sind lose.	Ziehen Sie die Schrauben fest.
	Zwischen Trommel und Gehäuse ist Wäsche gelangt.	Entfernen Sie die Wäsche auf dem Zwischenraum.
Aus dem Ablaufschlauch fließt kein Wasser ab.	Es ist Wäsche in den Raum außerhalb der Trommel geraten.	Nehmen Sie die Wäsche aus dem Zwischenraum.
	Kleine Gegenstände verstopfen den Ablaufschlauch.	Entfernen Sie die Gegenstände aus dem Ablaufschlauch.

HINWEISE ZU ENTSORGUNG



Befindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2012/19/EU. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit Ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

Dear Customer,

Congratulations on purchasing this equipment. Please read this manual carefully and take care of the following hints on installation and use to avoid technical damages. Any failure caused by ignoring the items and cautions mentioned in the operation and installation instructions are not covered by our warranty and any liability.

TECHNICAL DATA

Item number	10032558
Power supply	220-240 V ~ 50/60 Hz
Capacity	2.5 kg

FEATURES

- Mechanically advanced technology.
- Excellent design.
- High quality, durable and rust-proof plastic body.
- Big spin tub capacity, easy to operate.

DECLARATION OF CONFORMITY



Producer:
Chal-Tec GmbH, Wallstraße 16, 10179 Berlin,
Germany.

This product is conform to the following European Directives:

2014/30/EU (EMC)
2014/35/EU (LVD)
2011/65/EU (RoHS)


SAFETY INSTRUCTIONS

When using the spin dryer, basic safety precautions must be taken. Read all operating instructions before using the appliance.

- The appliance is intended for domestic use only.
- To ensure safety, make sure that the ground wire connections is reliable.
- Do not put your hands into the spin tub when it is spinning.
- Turn the spin timer clock wise. Forcing the timer to turn counter-clock wise will damage the timer.
- When the machine has an abnormal noise and vibrates severely, adjust the clothes evenly inside the spin tub.

OPERATION

1. Plug the power cord into the electrical outlet.

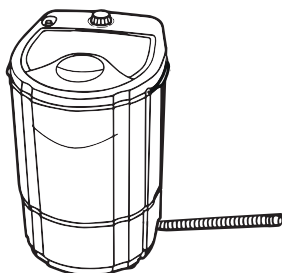

2. Put down the drain hose and open the lid.
3. Place the clothes inside the spin tub evenly, then put the spin-off preventer on top.
4. Turn the spin timer to the desired minutes.

Notes: spin tub will stop rotating once the lid is open. The machine will continue to rotate when the lid is closed after use, unplug the power cord and wipe the machine with dry cotton cloth. Keep the machine clean and dry and place it on a well ventilated space.

Spin dry times

Material	Times
Silk, wool, polyester fibres	1-2 minutes
Cotton, linen	2-4 minutes

TROUBLESHOOTING

Problem	Reason	Solution
Spin-tub does not rotate	Loose contact of spin timer switch.	Adjust or check the switch.
	Screws of motor and spin tub are loosely fastened.	Tighten the screws.
	Clothes are flung between the spin tub and the spin body.	Remove the clothes.
Water will not come out of the drain hose	Clothes are in the space outside the spin tub.	Remove the clothes.
	Small objects are blocking the drain hose.	Remove the small object from inside the drain hose.

DISPOSAL CONSIDERATIONS



According to the European waste regulation 2012/19/EU this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

ONE@NCEPT